

# Firmware Update Instruction User's Guide

 
---

## Overview

Firmware update tool is an application used to update monitor firmware.

## Firmware Update Pre-requisites

- 1 Connect the monitor to a power source, during the firmware update process.

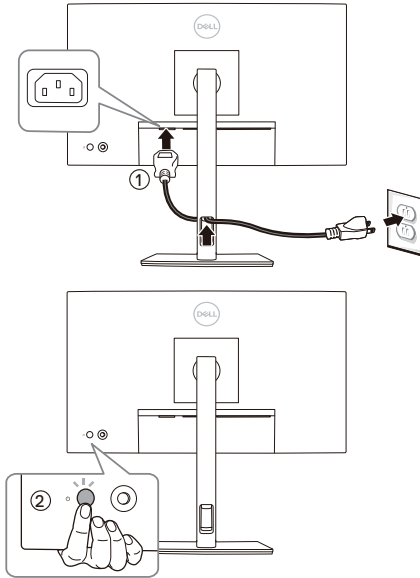

- 2 Make sure there is only ONE video input source, for example, DisplayPort, HDMI, or USB Type-C, from the computer to the monitor.



 
**NOTE:** Ensure that all other video cables between the monitor and the computer are unplugged.

- 3 Connect the USB Type-C cable directly between the monitor and your computer. Do not use any other device between this connection.

**NOTE:** Ensure that other USB cables and USB devices between the monitor and the computer are unplugged.

**NOTE:** Disconnect all other monitors from the notebook or desktop. This will ensure that only one display is connected while conducting firmware update.

**NOTE:** It is recommended to update the firmware with a notebook as the monitor screen may go blank during the firmware update process.

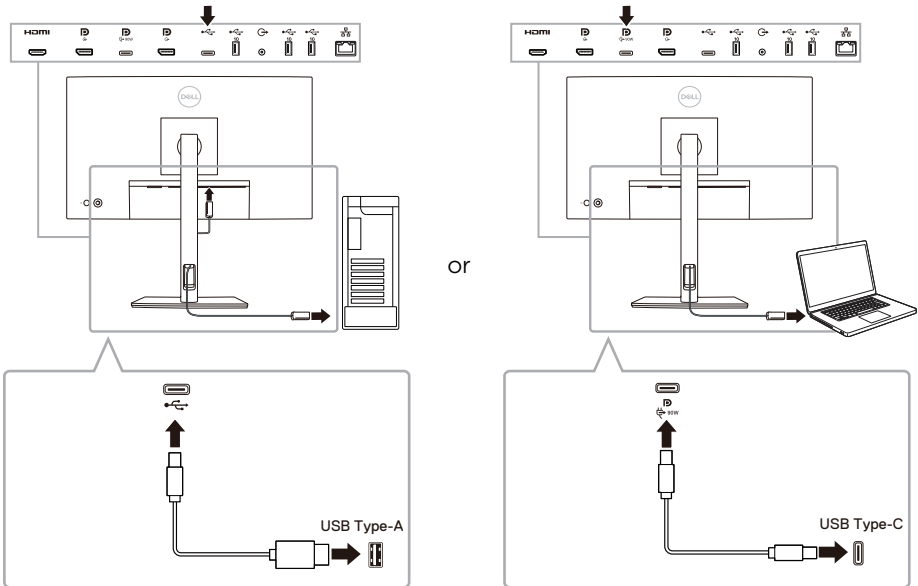


- 4 Exit DDM (Dell Display Manager) application before conducting firmware update.


**NOTE:** Do not unplug the cables till the updating process is complete.

**NOTE:** Please disable sleep mode before you launch the firmware update.


**NOTE:** Update one monitor at a time. Do not conduct firmware update on multiple monitors at a given time.

# Updating firmware

 
- 1 Double-click the ISP icon .
- 2 Initializing for device status.

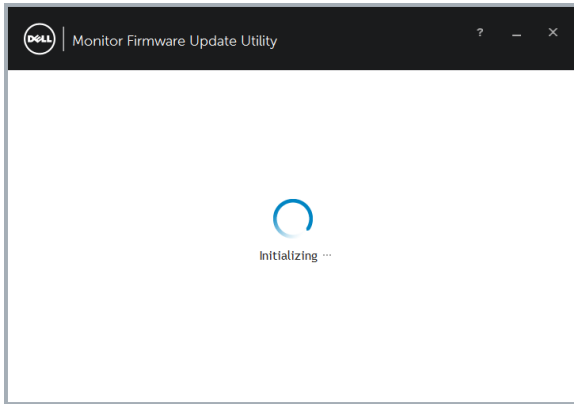

 
- 3 The utility will load the firmware file automatically. Or, you can select your file manually by clicking  and navigating to the UPG firmware file.

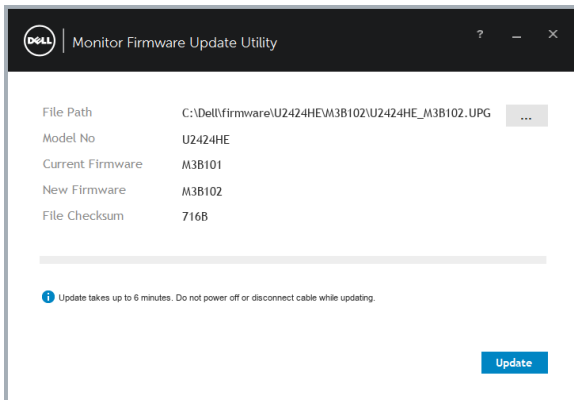

 
4 Click **Update**. The utility will start updating the new firmware.

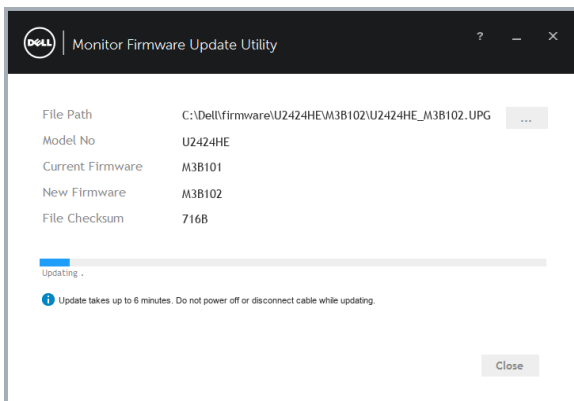

 5 Once the updating process is completed, please follow the on-screen instructions to restart your monitor.

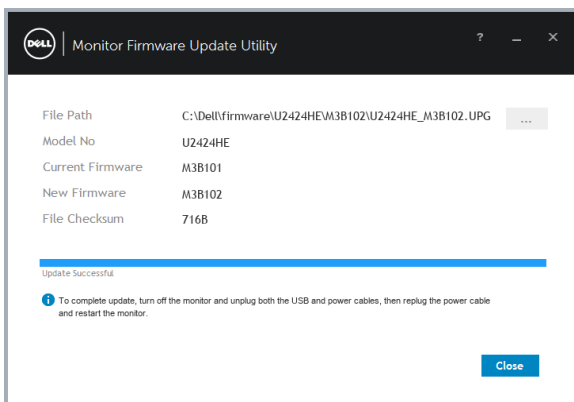

 **NOTE:** Update takes up to 6 minutes. Do not power off or disconnect cable while updating.

 **NOTE:** If you experience problems during or after the update, refer to [Troubleshooting](#).

# Troubleshooting

Errors	Possible Solutions
File permission error	<ul style="list-style-type: none"><li>• Save the firmware file in another location.</li><li>• Check if the firmware file has read permission.</li><li>• Check if you have owner rights for the firmware file.</li><li>• Run the utility with administrator privileges.</li></ul>
Monitor not detected	Follow <a href="#">Firmware Update Pre-requisites</a> to check if the power and USB cables are properly connected to your computer and reopen the Monitor Firmware Update Utility.
Write protection error	Re-try updating with the following steps:
Flash erase error	<b>1</b> Close the Monitor Firmware Update Utility.
Update error	<b>2</b> Turn off the monitor by pressing the power button.
Monitor firmware checksum error	<b>3</b> Re-plug the power cord.
Monitor firmware checksum error	<b>4</b> Turn on the monitor.
Monitor firmware checksum error	<b>5</b> Try updating again with the Monitor Firmware Update Utility.
USB device inactive after new firmware installation.	Re-try the updating steps from 1 to 4 as stated above.
A warning message appears: "Firmware update was not completed. Please update the monitor firmware again."	Re-try updating the monitor's firmware. Do not turn off the ISP tool until the update is complete.