
## Overview


Firmware update tool is an application used to update monitor firmware.

## Firmware Update Pre-requisites

 1 Connect the monitor to a power source, during the firmware update process.

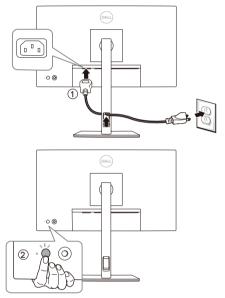

**2** Make sure there is only ONE video input source, for example, DisplayPort or HDMI, from the computer to the monitor.



**3** Connect the USB Type-C to Type-A cable directly between the monitor and your computer. Do not use any other device between this connection.




**NOTE:** Ensure that other USB cables and USB devices between the monitor and the computer are unplugged.



**NOTE:** Disconnect all other monitors from the notebook or desktop. This will ensure that only one display is connected while conducting firmware update.

**NOTE:** It is recommended to update the firmware with a notebook as the monitor screen may go blank during the firmware update process.

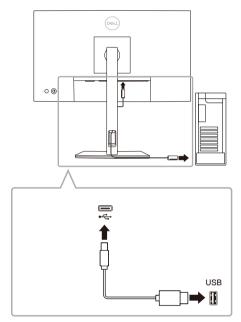

4 Exit DDM (Dell Display Manager) application before conducting firmware update.


**NOTE:** Do not unplug the cables till the updating process is complete.

**NOTE:** Please disable sleep mode before you launch the firmware update.

**NOTE:** Update one monitor at a time. Do not conduct firmware update on multiple monitors at a given time.

## Updating firmware

- 1 Double-click the ISP icon 🔜.
- 2 Initializing for device status.

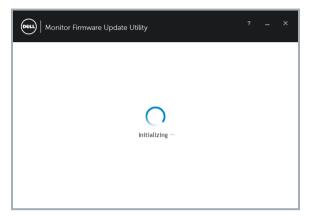

**3** The utility will load the firmware file automatically. Or, you can select your file manually by clicking ... and navigating to the UPG firmware file.

File Path C:\De Model No U242 Current Firmware M3B1 New Firmware M3B1 File Checksum 716B	01	
() Update takes up to 6 minutes. Do not po	ower off or disconnect cable while updating.	


4 Click **Update**. The utility will start updating the new firmware.

Monitor Firmv	vare Update Utility	?	-	)
File Path	C:\Dell\firmware\U2424H\62\M3B102\U2424H_M3B102.	UPG		
Model No	U2424H			
Current Firmware	M3B101			
New Firmware	M3B102			
File Checksum	716B			
Updating .	es. Do not power off or disconnect cable while updating.			
			lose	

**5** Once the updating process is completed, please follow the on-screen instructions to restart your monitor.



 **NOTE:** Update takes up to 6 minutes. Do not power off or disconnect cable while updating.



## Troubleshooting

Errors	Possible Solutions			
File permission error	<ul> <li>Save the firmware file in another location.</li> <li>Check if the firmware file has read permission.</li> <li>Check if you have owner rights for the firmware file.</li> <li>Run the utility with administrator privileges.</li> </ul>			
Monitor not detected	Follow Firmware Update Pre-requisites to check if the power and USB cables are properly connected to your computer and reopen the Monitor Firmware Update Utility.			
Write protection error	Re-try updating with the following steps:			
Flash erase error	1 Close the Monitor Firmware Update Utility.			
Update error	<ul> <li>2 Turn off the monitor by pressing the power button.</li> <li>3 Re-plug the power cord.</li> </ul>			
Monitor firmware checksum error	<ul><li>4 Turn on the monitor.</li><li>5 Try updating again with the Monitor Firmware Update Utility.</li></ul>			
USB device inactive after new firmware installation.	Re-try the updating steps from 1 to 4 as stated above.			
A warning message appears: "Firmware update was not completed. Please update the monitor firmware again."	Re-try updating the monitor's firmware. Do not turn off the ISP tool until the update is complete.			