

# Dell 27 Gaming Monitor -S2721DGF User's Guide

Model: S2721DGF  
Regulatory model: S2721DGFt





**NOTE:** A NOTE indicates important information that helps you make better use of your computer.



**CAUTION:** A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.



**WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

**Copyright © 2020 Dell Inc. or its subsidiaries. All rights reserved.** Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

2020 – 07

Rev. A00

# Contents

<b>Safety instructions</b>	<b>5</b>
<b>About your monitor</b>	<b>6</b>
Package contents	6
Product features	8
Identifying parts and controls	9
Front view	9
Back view	10
Bottom view	11
<b>Monitor specifications</b>	<b>12</b>
Resolution specifications	13
Preset display modes	14
Electrical specifications	15
Physical characteristics	15
Environmental characteristics	16
Power management modes	17
Pin assignments	18
Plug-and-Play	21
LCD monitor quality and pixel policy	21
Ergonomics	22
Handling and moving your display	24
Maintenance guidelines	25
Cleaning your monitor	25
<b>Setting up the monitor</b>	<b>26</b>
Connecting the stand	26
Using the tilt, swivel, and vertical extension	29



Tilt, swivel and vertical extension . . . . .	.29
Rotating the Display . . . . .	29
Configuring the display settings on your computer after rotation. . . . .	30
Connecting your monitor . . . . .	31
Organizing your cables . . . . .	33
Securing your monitor using Kensington lock (optional) . . .	33
Removing the monitor stand . . . . .	34
Wall mounting (Optional) . . . . .	35
Requirements to view or play HDR content. . . . .	36
<b>Operating the monitor . . . . .</b>	<b>37</b>
Power on the monitor . . . . .	37
Using the joystick control . . . . .	37
Using the rear-panel controls . . . . .	38
Using the On-Screen Display (OSD) Menu . . . . .	40
Accessing the menu system . . . . .	.40
OSD warning messages . . . . .	.52
Locking the rear-panel control buttons . . . . .	.54
Setting the maximum resolution. . . . .	.55
<b>Troubleshooting . . . . .</b>	<b>56</b>
Self-test . . . . .	56
Built-in diagnostics . . . . .	58
Common Problems. . . . .	59
Product specific problems . . . . .	61
Universal Serial Bus (USB) specific problems . . . . .	62
<b>Appendix. . . . .</b>	<b>63</b>
FCC notices (U.S. only) and other regulatory information. . .	63
Contacting Dell . . . . .	63
<b>Outline Dimension . . . . .</b>	<b>64</b>



# Safety instructions

**⚠ WARNING: Use of controls, adjustments, or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards, and/or mechanical hazards.**

- Place the monitor on a solid surface and handle it carefully. The screen is fragile and can be damaged if dropped or hit sharply.
- Always be sure that your monitor is electrically rated to operate with the AC power available in your location.
- Keep the monitor in room temperature. Excessive cold or hot conditions can have an adverse effect on the liquid crystal of the display.
- Do not subject the monitor to severe vibration or high impact conditions. For example, do not place the monitor inside a car trunk.
- Unplug the monitor when it is going to be left unused for an extended period of time.
- To avoid electric shock, do not attempt to remove any cover or touch the inside of the monitor.


For information on safety instructions, see the Safety, Environmental, and Regulatory Information (SERI).



# About your monitor




## Package contents

Your monitor ships with the components shown in the table below. If any component is missing, contact Dell. For more information, see [Contact Dell](#).

 **NOTE: Some components may be optional and may not ship with your monitor. Some features may not be available in certain countries.**

	Display
	Stand riser
	Stand base
	Power cable (varies by country)
	USB 3.0 upstream cable (enables the USB ports on the monitor)

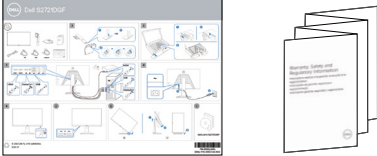

	DisplayPort cable (DisplayPort to DisplayPort)
	HDMI cable
	<ul style="list-style-type: none"><li>• Quick Setup Guide</li><li>• Safety, Environmental, and Regulatory Information</li></ul>



## Product features

The **Dell S2721DGF** monitor has an active matrix, Thin-Film Transistor (TFT), Liquid Crystal Display (LCD), and LED backlight. The monitor features include:

- 68.47 cm (27 in.) viewable area (Measured diagonally) 2560 x 1440 (16:9) resolution, plus full-screen support for lower resolutions.
- Wide viewing angles with 98% DCI-P3 color gamut.
- Tilt, swivel, pivot and vertical extension adjustment capabilities.
- Removable pedestal stand and Video Electronics Standards Association (VESA™) 100 mm mounting holes for flexible mounting solutions.
- Ultra-thin bezel minimizes the bezel gap during multi-monitor usage, enabling easier set up with an elegant viewing experience.
- Extensive digital connectivity with DP helps future-proof your monitor.
- Plug and play capability if supported by your computer.
- On-Screen Display (OSD) adjustments for ease of set-up and screen optimization.
- Game enhanced features such as Timer, Frame Rate Counter and Dark Stabilizer in addition to enhanced game modes such as FPS, MOBA/RTS, SPORTS, or RPG , and 3 additional game modes to personalize your preferences.
- Power and OSD buttons lock.
- Security lock slot.
- 0.3 W standby power when in the sleep mode without USB cable.
- AMD FreeSync™ Premium Pro for Tear free, stutter free, low latency HDR gaming.
- VESA DisplayHDR™ 400.
- Premium Panel Exchange for peace of mind.
- Optimize eye comfort with a flicker-free screen and ComfortView feature which minimizes blue light emission.

**⚠ WARNING: The possible long-term effects of blue light emission from the monitor may cause damage to the eyes, including eye fatigue or digital eye strain. ComfortView feature is designed to reduce the amount of blue light emitted from the monitor to optimize eye comfort.**





# Identifying parts and controls

## Front view



Label	Description	Use
1	Power On/Off button (with LED indicator)	To turn the monitor on or off.




## Back view




Label	Description	Use
1	VESA mounting holes (100 mm x 100 mm-behind attached VESA cover)	Wall mount monitor using VESA-compatible wall mount kit (100 mm x 100 mm).
2	Regulatory label	Lists the regulatory approvals.
3	Stand release button	Releases stand from the monitor.
4	Joystick	Use it to control the OSD menu.
5	Function buttons	For more information, see <a href="#">Operating the Monitor</a> .
6	Barcode, serial number, and Service Tag label	Refer to this label if you need to contact Dell for technical support. The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information.
7	Cable-management slot	Use to organize cables by inserting them through the slot.



## Bottom view

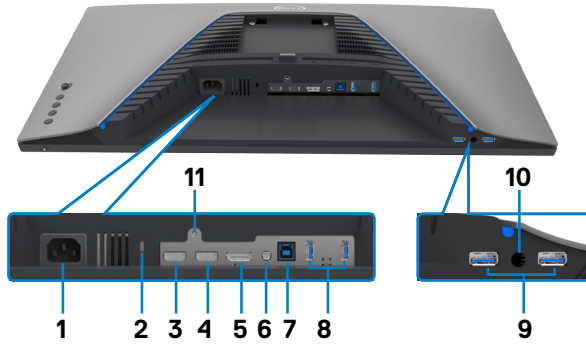

Label	Description	Use
1	Power connector	Connect the power cable (shipped with your monitor).
2	Security lock slot	Secures monitor with security cable lock (sold separately).
3	HDMI port (HDMI 1)	Connect your computer with the HDMI cable (shipped with your monitor).
4	HDMI port (HDMI 2)	Connect your computer with the HDMI cable (shipped with your monitor).
5	DisplayPort	Connect your computer with the DisplayPort cable.
6	Audio line-out port	Connect speakers to playback audio through HDMI or DisplayPort audio channels. Only two-channel audio is supported. <b>NOTE:</b> The audio line-out port does not support headphones.
7	USB upstream port	Connect the USB cable that comes with your monitor to the computer. Once this cable is connected, you can use the USB downstream connectors on the monitor.
8, 9	USB downstream ports (4)	Connect your USB peripherals such as mouse and keyboard. Port with  battery icon supports BC 1.2. <b>NOTE:</b> To use these ports, you must connect the USB upstream cable (shipped with your monitor) between the monitor and the computer.
10	Audio headphone port	Connect headphone speakers.
11	Stand lock	Lock the stand to the monitor using a M3 x 6 mm screw (screw not included).



## Monitor specifications

Screen type	Active matrix - TFT LCD
Panel Type	In-plane switching Technology
Aspect ratio	16:9
Viewable image dimensions	
Diagonal	68.47 cm (27 in.)
Active Area	
Horizontal	596.74 mm (23.49 in.)
Vertical	335.66 mm (13.21 in.)
Area	200301.7 mm <sup>2</sup> (310.47 in. <sup>2</sup> )
Pixel pitch	0.2331 mm x 0.2331 mm
Pixel per inch (PPI)	109
Viewing angle	
Horizontal	178° (typical)
Vertical	178° (typical)
Brightness	400 cd/m <sup>2</sup> (typical)
Contrast ratio	1000 to 1 (typical)
Display screen coating	Anti-glare treatment of the front polarizer (3H) hard coating
Backlight	LED edgelight system
Response Time (Gray to Gray)	4 ms (Fast mode) 3 ms (SuperFast mode) 1 ms (Extreme mode) NOTE: In Extreme mode, slight artifacts may be encountered due to overdriving for fast speed and responsiveness. Use Super Fast/Fast mode for optimal front of screen experience and game play.
Color depth	1.07 billion colors
Color gamut*	98% DCI-P3
Connectivity	<ul style="list-style-type: none"> <li>• 1 x DisplayPort 1.4 (HDCP 1.4/HDCP 2.2)</li> <li>• 2 x HDMI 2.0 (HDCP 1.4/HDCP 2.2)</li> <li>• 4 x USB 3.0 downstream port</li> <li>• 1 x USB 3.0 upstream port</li> <li>• 1 x Audio line-out port (3.5 mm jack)</li> <li>• 1 x Audio headphone port (3.5 mm jack)</li> </ul>



Border width (edge of monitor to active area)	
Top	7.42 mm
Left/Right	7.43 mm
Bottom	20.33 mm
Adjustability	
Height adjustable stand	130 mm
Tilt	-5° to 21°
Swivel	-45° to 45°
Pivot	-90° to 90°
Cable management	Yes
Dell Display Manager (DDM) Compatibility	Easy Arrange and other key features
Security	Security lock slot (cable lock sold separately)

\* At panel native only, under Custom Mode preset.

**Resolution specifications**

<b>Resolution specifications</b>	<b>HDMI</b>	<b>DisplayPort</b>
Horizontal scan range	30 kHz to 230 kHz	30 kHz to 250 kHz
Vertical scan range	48 Hz to 144 Hz	48 Hz to 165 Hz
Maximum preset resolution	2560 x 1440 at 144 Hz	2560 x 1440 at 165 Hz
Video display capabilities (HDMI & DP alternate mode)	480i, 480p, 576i, 576p, 720p, 1080i, 1080p	



## Preset display modes

Display mode	Horizontal frequency (kHz)	Vertical frequency (Hz)	Pixel clock (MHz)	Sync polarity (Horizontal/Vertical)
VESA 720 x 400	31.469	70.087	28.322	-/+
VESA 640 x 480	31.469	59.94	25.175	-/-
VESA 640 x 480	37.5	75	31.5	-/-
VESA 800 x 600	37.879	60.317	40	+/+
VESA 800 x 600	46.875	75	49.5	+/+
VESA 1024 x 768	48.363	60.004	65	-/-
VESA 1024 x 768	60.023	75.029	78.75	+/+
VESA 1152 x 864	67.5	75	108	+/+
VESA 1280 x 800	49.702	59.8	83.5	-/+
VESA 1280 x 1024	64	60	108	+/+
VESA 1280 x 1024	79.976	75.025	135	+/+
VESA 1600 x 1200	75	60	162	-/+
VESA 1680 x 1050	65.92	59.95	146.25	+/+
VESA 1920 x 1080	67.5	60	148.5	-/+
VESA 1920 x 1080	135	120	297	+/+
VESA 1920 x 1200	74.56	59.89	193.25	-/+
VESA 2048 x 1152	72	60	162	+/-
VESA 2560 x 1080	66.66	60	185.581	+/-
VESA 2560 x 1440	88.8	60	241.5	+/-
VESA 2560 x 1440	182.996	120	497.75	+/-
VESA 2560 x 1440	222.192	144	592	+/-
VESA 2560 x 1440 (DisplayPort 1.4 only)	244.32	165	645	+/-



## Electrical specifications

Video input signals	<ul style="list-style-type: none"><li>• Digital video signal for each differential line Per differential line at 100 ohm impedance</li><li>• DP/HDMI signal input support</li></ul>
Input voltage/ frequency/current	100-240 VAC / 50 or 60 Hz $\pm$ 3 Hz / 1.6 A (maximum)
Inrush current	120 V: 30 A (Max.) 240 V: 60 A (Max.)

## Physical characteristics

Connector type	<ul style="list-style-type: none"><li>• One DisplayPort</li><li>• Two HDMI 2.0 ports</li><li>• One audio line-out port</li><li>• One headphone port</li><li>• Four USB 3.0 downstream ports</li><li>• One USB 3.0 upstream port</li></ul>
Signal cable type	<ul style="list-style-type: none"><li>• DisplayPort to DisplayPort 1.8 m cable</li><li>• HDMI 1.8 m cable</li><li>• USB 3.0 1.8 m cable</li></ul>
Dimensions (with stand)	
Height (extended)	523.9 mm (20.63 in.)
Height (compressed)	393.9 mm (15.51 in.)
Width	611.6 mm (24.08 in.)
Depth	200.3 mm (7.89 in.)
Dimensions (without stand)	
Height	363.6 mm (14.31 in.)
Width	611.6 mm (24.08 in.)
Depth	67.8 mm (2.67 in.)
Stand dimensions	
Height (extended)	416.9 mm (16.41 in.)
Height (compressed)	369.2 mm (14.54 in.)
Width	275.9 mm (10.86 in.)
Depth	200.3 mm (7.89 in.)



Weight	
Weight with packaging	9.7 kg (21.4 lb)
Weight with stand assembly and cables	7.0 kg (15.4 lb)
Weight without stand assembly (For wall mount or VESA mount considerations - no cables)	4.5 kg (9.9 lb)
Weight of stand assembly	2.1 kg (4.6 lb)

## Environmental characteristics

Compliant Standards	
<ul style="list-style-type: none"> <li>• RoHS Compliant</li> <li>• BFR/PVC Free monitor (excluding external cables)</li> <li>• Arsenic-Free glass and Mercury-Free for the panel only</li> </ul>	
Temperature	
Operating	0°C to 40°C (32°F to 104°F)
Non-operating	-20°C to 60°C (-4°F to 140°F)
Humidity	
Operating	10% to 80% (non-condensing)
Non-operating	5% to 90% (non-condensing)
Altitude	
Operating	5,000 m (16,404 ft) (maximum)
Non-operating	12,192 m (40,000 ft) (maximum)
Thermal dissipation	307.09 BTU/hour (maximum) 109.19 BTU/hour (typical)






## Power management modes

If you have VESA's DPM-compliant video card or software installed in your PC, the monitor can automatically reduce its power consumption when not in use. This is referred to as power save mode\*. If the computer detects input from the keyboard, mouse, or other input devices, the monitor automatically resumes functioning. The following table shows the power consumption and signaling of this automatic power saving feature.

VESA modes	Horizontal sync	Vertical sync	Video	Power indicator	Power consumption
Normal operation	Active	Active	Active	White	90 W (maximum)** 32 W (typical)
Active-off mode	Inactive	Inactive	Off	White (Glowing)	Less than 0.3 W
Switch off	-	-	-	Off	Less than 0.3 W

Power Consumption $P_{on}$	28.17 W
Total Energy Consumption (TEC)	87.62 kWh

The OSD operates only in the normal operation mode. If you press any button in the active-off mode, the following message is displayed:

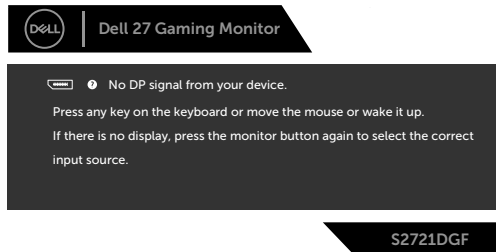

\*Zero power consumption in OFF mode can only be achieved by disconnecting the AC mains cable from the monitor.

\*\*Maximum power consumption with maximum luminance, and USB active.

This document is informational only and reflects laboratory performance. Your product may perform differently, depending on the software, components and peripherals you ordered and shall have no obligation to update such information. Accordingly, the customer should not rely upon this information in making decisions about electrical tolerances or otherwise. No warranty as to accuracy or completeness is expressed or implied.

Activate the computer and the monitor to gain access to the OSD.

### NOTE:


**$P_{on}$ : Power consumption of On Mode measured with reference to Energy Star test method.**



**TEC: Total energy consumption in kWh measured with reference to Energy Star test method.**

**Pin assignments**


**DisplayPort**

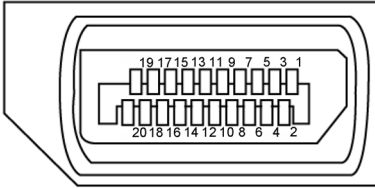

Pin number	20-pin side of the connected signal cable	Pin number	20-pin side of the connected signal cable
<b>1</b>	ML3(n)	<b>11</b>	GND
<b>2</b>	GND	<b>12</b>	ML0(p)
<b>3</b>	ML3(p)	<b>13</b>	CONFIG1
<b>4</b>	ML2(n)	<b>14</b>	CONFIG2
<b>5</b>	GND	<b>15</b>	AUX CH (p)
<b>6</b>	ML2(p)	<b>16</b>	GND
<b>7</b>	ML1(n)	<b>17</b>	AUX CH (n)
<b>8</b>	GND	<b>18</b>	Hot Plug Detect
<b>9</b>	ML1(p)	<b>19</b>	Return
<b>10</b>	ML0(n)	<b>20</b>	DP_PWR



## HDMI port

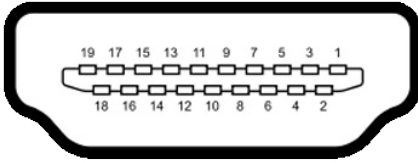

Pin number	19-pin side of the connected signal cable	Pin number	19-pin side of the connected signal cable
1	TMDS DATA 2+	11	TMDS CLOCK SHIELD
2	TMDS DATA 2 SHIELD	12	TMDS CLOCK-
3	TMDS DATA 2-	13	CEC
4	TMDS DATA 1+	14	Reserved (N.C. on device)
5	TMDS DATA 1 SHIELD	15	DDC CLOCK (SCL)
6	TMDS DATA 1-	16	DDC DATA (SDA)
7	TMDS DATA 0+	17	DDC/CEC Ground
8	TMDS DATA 0 SHIELD	18	+5 V POWER
9	TMDS DATA 0-	19	HOT PLUG DETECT
10	TMDS CLOCK+		



## Universal Serial Bus (USB)


This section gives you information about the USB ports available on your monitor.

 **NOTE: Up to 2 A on USB downstream port (port with  battery icon) with BC 1.2 compliance devices; up to 0.9 A on the other 2 USB downstream ports.**

Your monitor has the following USB ports:

- 1 upstream port
- 4 downstream - 4 at bottom


Power Charging Port - the ports with  battery icon supports fast current charging capability if the device is BC 1.2 compatible.

 **NOTE: The monitor's USB ports work only when the monitor is on or in the power save mode. If you turn off the monitor and then turn it on, the attached peripherals may take a few seconds to resume normal functionality.**

Transfer speed	Data rate	Maximum power consumption (each port)
SuperSpeed	5 Gbps	4.5 W
Hi-Speed	480 Mbps	2.5 W
Full speed	12 Mbps	2.5 W




## USB upstream port

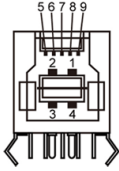

Pin number	Signal name
1	VBUS
2	D-
3	D+
4	GND
5	StdB_SSTX-
6	StdB_SSTX+
7	GND_DRAIN
8	StdB_SSRX-
9	StdB_SSRX+
Shell	Shield

## USB downstream port

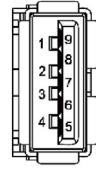 

Pin number	Signal name
1	VBUS
2	D-
3	D+
4	GND
5	StdA_SSRX-
6	StdA_SSRX+
7	GND_DRAIN
8	StdA_SSTX-
9	StdA_SSTX+
Shell	Shield

## Plug-and-Play

You can install the monitor in any Plug-and-Play-compatible system. The monitor automatically provides the computer system with its extended display identification data (EDID) using display data channel (DDC) protocols so the computer can configure itself and optimize the monitor settings. Most monitor installations are automatic; you can select different settings if desired. For more information about changing the monitor settings, see [Operating the Monitor](#).

## LCD monitor quality and pixel policy

During the LCD monitor manufacturing process, it is not uncommon for one or more pixels to become fixed in an unchanging state which are hard to see and do not affect the display quality or usability. For more information on LCD Monitor Pixel Policy, see Dell support site at: [www.dell.com/pixelguidelines](http://www.dell.com/pixelguidelines).



# Ergonomics

**△ CAUTION: Improper or prolonged usage of keyboard may result in injury.**


**△ CAUTION: Viewing the monitor screen for extended periods of time may result in eye strain.**

For comfort and efficiency, observe the following guidelines when setting up and using your computer workstation:

- Position your computer so that the monitor and keyboard are directly in front of you as you work. Special shelves are commercially available to help you correctly position your keyboard.
- To reduce the risk of eye strain and neck/arm/back/shoulder pain from using the monitor for long periods of time, we suggest you to:
  1. Set the screen about 20 to 28 in. (50-70 cm) from your eyes.
  2. Blink frequently to moisten or rewet your eyes when working with the monitor.
  3. Take regular and frequent breaks for 20 minutes every two hours.
  4. Look away from your monitor and gaze at a distant object at 20 feet away for at least 20 seconds during the breaks.
  5. Perform stretches to relieve tension in the neck/arm/back/shoulders during the breaks.
- Make sure that the monitor screen is at eye level or slightly lower when you are sitting in front of the monitor.
- Adjust the tilt of the monitor, its contrast, and brightness settings.
- Adjust the ambient lighting around you (such as overhead lights, desk lamps, and the curtains or blinds on nearby windows) to minimize reflections and glare on the monitor screen.
- Use a chair that provides good lower-back support.
- Keep your forearms horizontal with your wrists in a neutral, comfortable position while using the keyboard or mouse.
- Always leave space to rest your hands while using the keyboard or mouse.
- Let your upper arms rest naturally on both sides.
- Ensure that your feet are resting flat on the floor.
- When sitting, make sure that the weight of your legs is on your feet and not on the front portion of your seat. Adjust your chair's height or use a footrest if necessary to maintain a proper posture.
- Vary your work activities. Try to organize your work so that you do not have to sit and work for extended periods of time. Try to stand or get up and walk around at regular intervals.




- Keep the area under your desk clear of obstructions and cables or power cords that may interfere with comfortable seating or present a potential trip hazard.

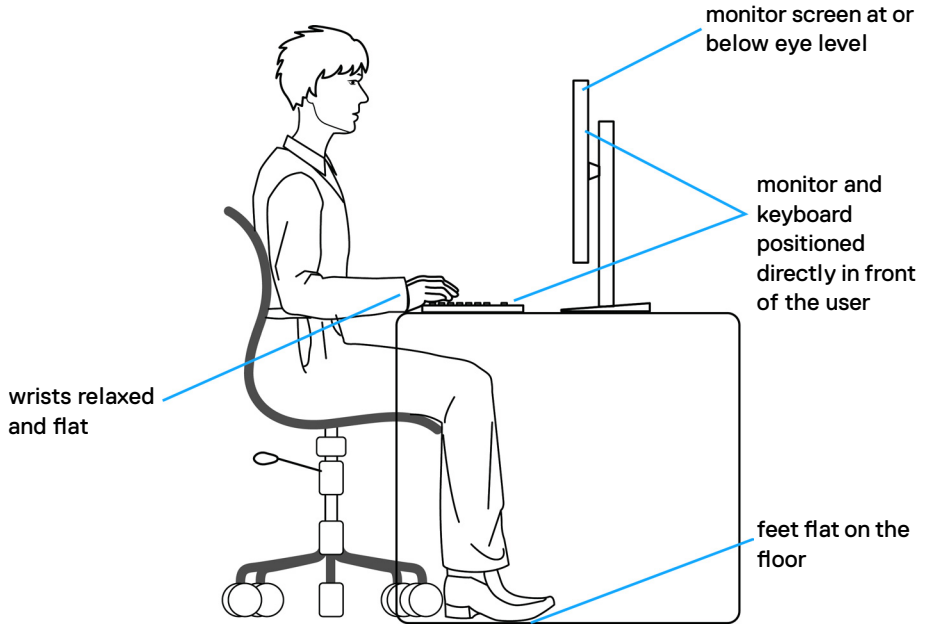


# Handling and moving your display

To ensure the monitor is handled safely when lifting or moving it, follow the guidelines mentioned below:

- Before moving or lifting the monitor, turn off your computer and the monitor.
- Disconnect all cables from the monitor.
- Place the monitor in the original box with the original packing materials.
- Hold the bottom edge and the side of the monitor firmly without applying excessive pressure when lifting or moving the monitor.

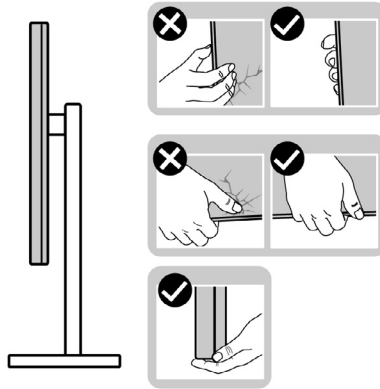

- When lifting or moving the monitor, ensure the screen is facing away from you and do not press on the display area to avoid any scratches or damage.

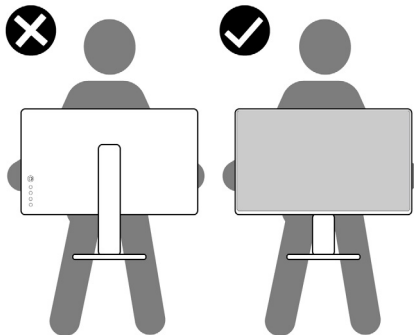


- When transporting the monitor, avoid any sudden shock or vibration to it.





- When lifting or moving the monitor, do not turn the monitor upside down while holding the stand base or stand riser. This may result in accidental damage to the monitor or cause personal injury.

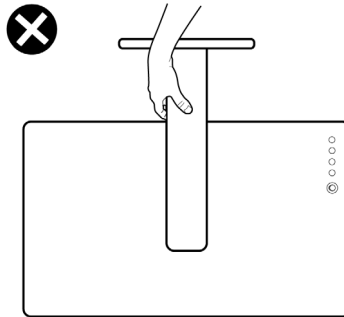

## Maintenance guidelines

### Cleaning your monitor

**⚠ WARNING:** Before cleaning the monitor, unplug the monitor power cable from the electrical outlet.

**⚠ CAUTION:** Read and follow the [Safety Instructions](#) before cleaning the monitor.



For best practices, follow these instructions in the list below while unpacking, cleaning, or handling your monitor:

- To clean your anti-static screen, lightly dampen a soft, clean cloth with water. If possible, use a special screen-cleaning tissue or solution suitable for the anti-static coating. Do not use benzene, thinner, ammonia, abrasive cleaners, or compressed air.
- Use a lightly-dampened, soft cloth to clean the monitor. Avoid using detergent of any kind as some detergents leave a milky film on the monitor.
- If you notice white powder when you unpack your monitor, wipe it off with a cloth.
- Handle your monitor with care as a darker-colored monitor may get scratched and show white scuff marks more than a lighter-colored monitor.
- To help maintain the best image quality on your monitor, use a dynamically changing screen saver and turn off your monitor when not in use.




# Setting up the monitor

## Connecting the stand

-  **NOTE:** The stand riser and stand base are detached when the monitor is shipped from the factory.
-  **NOTE:** The following instructions are applicable only for the stand that was shipped with your monitor. If you are connecting a stand that you purchased from any other source, follow the set up instructions that were included with the stand.

### To attach the monitor stand:

1. Align and place the stand riser on the stand base.
2. Open the screw handle at the bottom of the stand base and turn it clockwise to secure the stand assembly.
3. Close the screw handle.

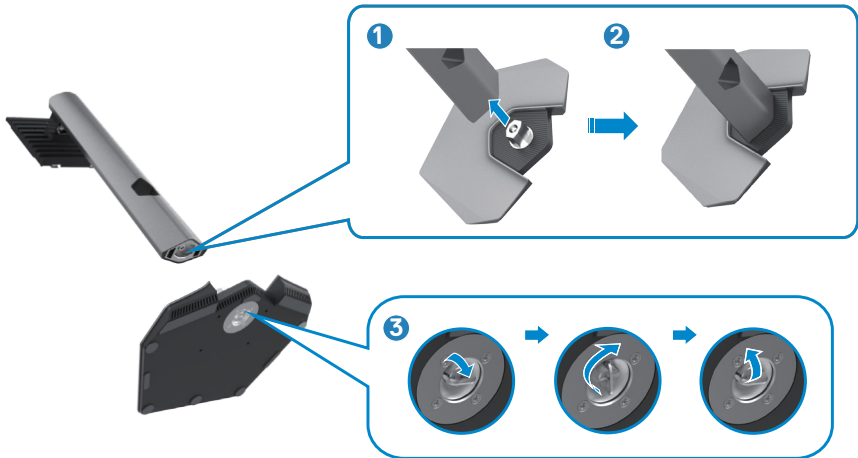

4. Open the protective cover on the monitor to access the VESA slot on the monitor.



5. Slide the tabs on the stand riser into the slots on the display back cover and press down the stand assembly to snap it into place.




6. Hold the stand riser and lift the monitor carefully, then place it on a flat surface.




**NOTE:** Hold the stand riser firmly when lifting the monitor to avoid any accidental damage.

7. Lift the protective cover from the monitor.

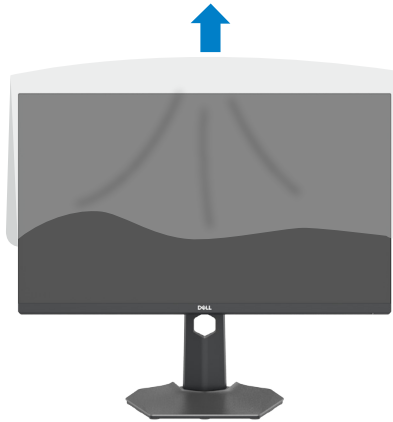


## Using the tilt, swivel, and vertical extension

 The following instructions are applicable only for the stand that was shipped with your monitor. If you are connecting a stand that you purchased from any other source, follow the set up instructions that were included with the stand.

### Tilt, swivel and vertical extension

With the stand attached to the monitor, you can tilt the monitor for the most comfortable viewing angle.

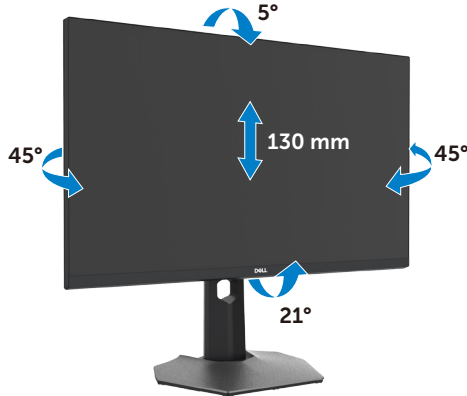


 **NOTE:** The stand is detached when the monitor is shipped from the factory.

### Rotating the Display

Before you rotate the display, extend the display vertically until the top of the stand riser and then tilt the display backwards until the maximum to avoid hitting the bottom edge of the display.




 **NOTE:** To toggle the display setting on your Dell computer between landscape and portrait when rotating the display, download and install the latest graphics driver. To download, go to [www.dell.com/support/drivers](http://www.dell.com/support/drivers) and search for the appropriate driver.

 **NOTE:** When the display is in portrait mode, you may experience performance degradation when using graphic-intensive applications such as 3D gaming.


## Configuring the display settings on your computer after rotation

After you have rotated the display, complete the procedure given below to configure the display settings on your computer.

 **NOTE:** If you are using the monitor with a non-Dell computer, go to the graphics card manufacturer's website or your computer manufacturer website for information on how to rotate the contents of your display.

### To configure the Display Settings:

1. Right-click on the **Desktop** and click **Properties**.
2. Select the **Settings** tab and click **Advanced**.
3. If you have an AMD graphics card, select the **Rotation** tab and set the preferred rotation.
4. If you have an **nVidia** graphics card, click the **nVidia** tab, in the left-hand column select **NVRotate**, and then select the preferred rotation.
5. If you have an Intel® graphics card, select the Intel graphics tab, click **Graphic Properties**, select the **Rotation** tab, and then set the preferred rotation.

 **NOTE:** If you do not see the rotation option or it is not working correctly, go to [www.dell.com/support](http://www.dell.com/support) and download the latest driver for your graphics card.



# Connecting your monitor


**⚠ WARNING:** Before you begin any of the procedures in this section, follow the [Safety Instructions](#).

## To connect your monitor to the computer:


1. Turn off your computer.
2. Connect the DisplayPort or HDMI cable, and the USB cable from your monitor to the computer.
3. Turn on your monitor.
4. Select the correct input source from the OSD Menu on your monitor and then turn on your computer.

**📌 NOTE:** S2721DGF default setting is DisplayPort 1.4. A DisplayPort 1.1 Graphic card may not display normally. Please refer to [“product specific problems – No image when using DP connection to the PC”](#) to change default setting.


## Connecting the HDMI cable

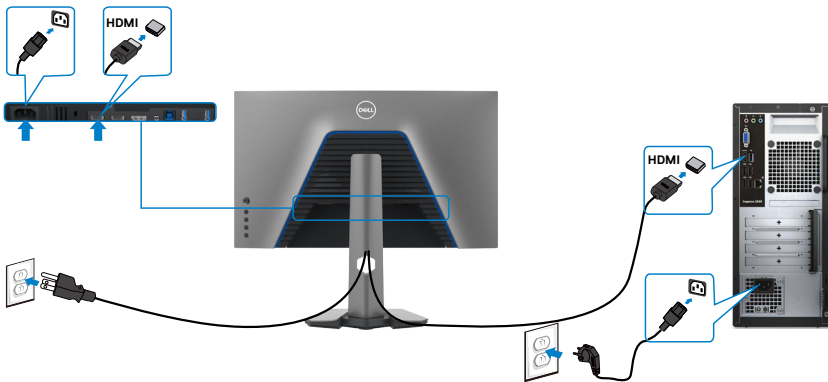

## Connecting the DP cable

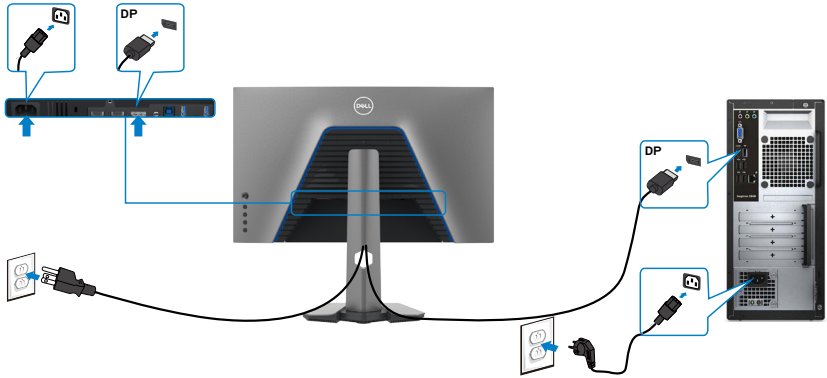

## Connecting the USB cable

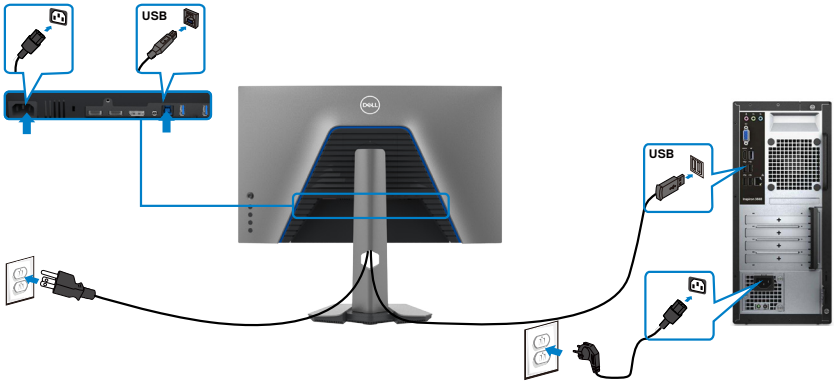



## Organizing your cables




After attaching all necessary cables to your monitor and computer, (see [Connecting Your Monitor](#) for cable attachment) organize all cables as shown above.

## Securing your monitor using Kensington lock (optional)

The security lock slot is located at the bottom of the monitor. (See [Security lock slot](#))

For more information on using the Kensington lock (purchased separately), see the documentation that is shipped with the lock.

Secure your monitor to a table using the Kensington security lock.

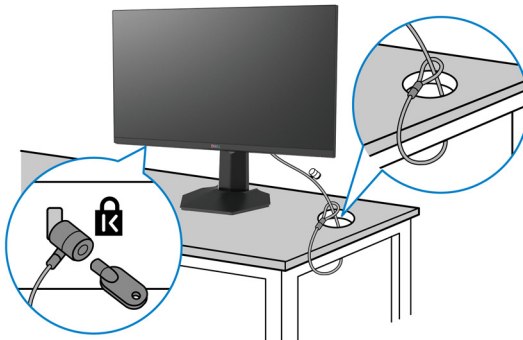

**NOTE:** The image is for the purpose of illustration only. Appearance of the lock may vary.



## Removing the monitor stand

**⚠ CAUTION:** To prevent scratches on the LCD screen when removing the stand, ensure that the monitor is placed on a soft, clean surface.

**📌 NOTE:** The following instructions are applicable only for the stand that was shipped with your monitor. If you are connecting a stand that you purchased from any other source, follow the set up instructions that were included with the stand.

### To remove the stand:

1. Place the monitor on a soft cloth or cushion.
2. Press and hold the stand-release button.
3. Lift the stand up and away from the monitor.



## Wall mounting (Optional)



**NOTE:** Use M4 x 10 mm screws to connect the monitor to the wall-mounting kit.

Refer to the instructions that come with the VESA-compatible wall mounting kit.

1. Place the monitor on a soft cloth or cushion on a stable flat table.
2. Remove the stand.
3. Use a Phillips crosshead screwdriver to remove the four screws securing the plastic cover.
4. Attach the mounting bracket from the wall mounting kit to the monitor.
5. Mount the monitor on the wall as instructed in the documentation that shipped with the wall-mounting kit.

**NOTE:** For use only with UL or CSA or GS-listed wall mount bracket with minimum weight/load bearing capacity of 18 kg (39.7 lb).



# Requirements to view or play HDR content

## Through computer that supports HDR content

Ensure that the graphics card used is HDR-capable (HDMI version 2.0a/DP1.4/USB HDR compliant), and also ensure that HDR graphics driver is installed. HDR-capable player application must be used, for example, Cyberlink PowerDVD 17, Microsoft Movies & TV app.

For example, Dell XPS 8910 and Alienware Aurora R5 are bundled with the following graphic cards.


Dell Graphics driver with HDR support	For downloading the latest graphics driver that supports HDR playback on your desktop or laptop, see Dell support site at <a href="http://www.dell.com/support/monitors">www.dell.com/support/monitors</a> .
NVIDIA	HDR-capable NVIDIA graphics cards include GTX1070, GTX1080, P5000, P6000, and so on.  For a full range of HDR-capable NVIDIA graphics cards, see the NVIDIA website <a href="http://www.nvidia.com">www.nvidia.com</a> . Driver that supports Full Screen Playback mode (for example, computer games, UltraBluRay players), HDR on Win10 Redstone 2 OS: 384.76 or later.
AMD	HDR-capable AMD graphics cards include RX480, RX470, RX460, WX7100, WX5100, WX4100, and so on. For a full range of HDR-capable AMD graphics cards, see <a href="http://www.amd.com">www.amd.com</a> . Check the HDR driver support information and download the latest driver from <a href="http://www.amd.com">www.amd.com</a> .
Intel (Integrated Graphics)	HDR-capable system: CannonLake or later Suitable HDR player: Windows 10 Movies and TV app  OS with HDR support: Windows 10 Redstone 3  Driver with HDR support: For more information about the latest HDR drivers, see <a href="http://downloadcenter.intel.com">downloadcenter.intel.com</a> .


**NOTE: HDR playback through OS, for example, playback of HDR in a window within desktop requires Windows 10 Redstone 2 or later with appropriate player applications like PowerDVD17. Playing back protected content requires appropriate DRM software and/or hardware like Microsoft Playready™. For HDR support information, see Microsoft website.**



# Operating the monitor


## Power on the monitor

Press the  button to turn on the monitor.

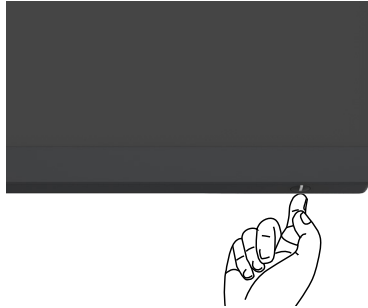

## Using the joystick control

Use the joystick control on the rear of the monitor to make OSD adjustments.

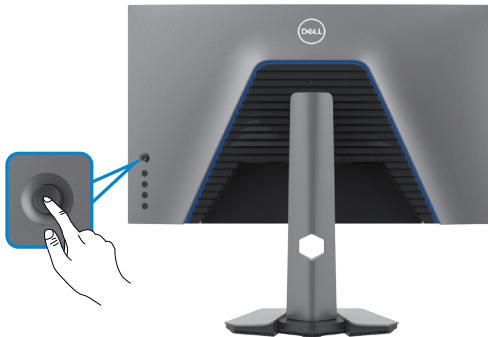

1. Press the joystick button to launch the OSD main menu.
2. Move the joystick up/down/left/right to toggle between options.
3. Press the joystick button again to confirm the settings and exit.

---

### Joystick Description



- When the OSD menu is on, press the button to confirm the selection or save the settings.
  - When the OSD menu is off, press the button to launch the OSD main menu. See [Accessing the menu system](#).
- 






- For 2-way (right and left) directional navigation.
- Move right to enter the submenu.
- Move left to exit from the submenu.
- Increases (right) or decreases (left) the parameters of selected menu item.






- For 2-way (up and down) directional navigation.
- Toggles between the menu items.
- Increases (up) or decreases (down) the parameters of selected menu item.

## Using the rear-panel controls

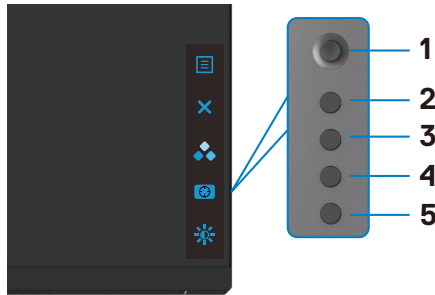
Use the control buttons on the rear of the monitor to adjust the display settings. As you use these buttons to adjust the settings, an OSD shows the numeric values of each feature as they change.



The following table describes the rear-panel buttons:

Rear-panel button	Description
1  <b>Menu</b>	Use this <b>Menu</b> button to launch the on-screen display (OSD) and select the OSD menu. See <a href="#">Accessing the Menu System</a> .
2  <b>Exit</b>	Use this button to go back to the main menu or exit the OSD main menu.
3  <b>Shortcut key: Preset Modes</b>	Use this button to choose from a list of preset color modes.




Rear-panel button	Description
<p>4</p>  <p><b>Shortcut key:</b> <b>Dark Stabilizer</b></p>	<p>To directly access the <b>Dark Stabilizer</b> adjustment sliders.</p>
<p>5</p>  <p><b>Shortcut key:</b> <b>Brightness/Contrast</b></p>	<p>To directly access the <b>Brightness/Contrast</b> adjustment sliders.</p>


When you press any of these buttons, the OSD Status Bar appears to let you know the current settings of some OSD functions.



# Using the On-Screen Display (OSD) Menu

## Accessing the menu system

Icon	Menu and Submenus	Description
	<b>Game</b>	Use this menu to personalize your visual gameplay experience.

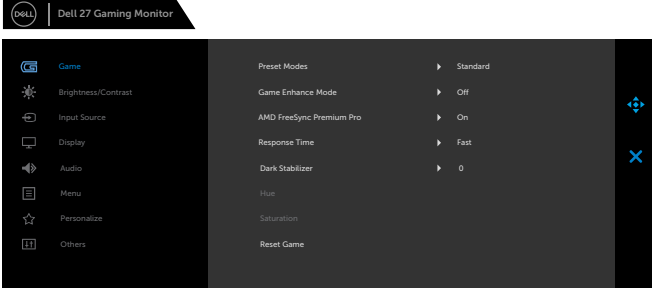


The screenshot shows the OSD menu for a Dell 27 Gaming Monitor. The 'Game' menu is selected, showing options: Brightness/Contrast, Input Source, Display, Audio, Menu, Personalize, and Others. The 'Game' submenu is open, showing: Preset Modes (Standard), Game Enhance Mode (Off), AMD FreeSync Premium Pro (On), Response Time (Fast), Dark Stabilizer (0), Hue, Saturation, and Reset Game.

S2721DGF

### Preset Modes

Allows you to choose from a list of preset color modes.

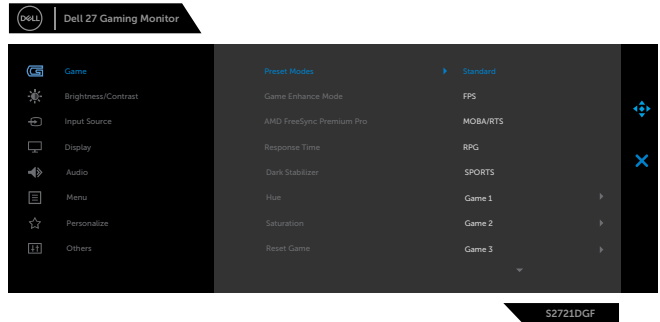

- ◆ **Standard:** Loads the monitor's default color settings. This is the default preset mode.
- ◆ **FPS:** Loads color settings ideal for First-Person Shooter games.
- ◆ **MOBA/RTS:** Loads color settings ideal for Multiplayer Online Battle Arena (MOBA) and Real-Time Strategy (RTS) games.
- ◆ **RPG:** Loads color settings ideal for Role-Playing games.
- ◆ **SPORTS:** Loads color settings ideal for "SPORTS" games.




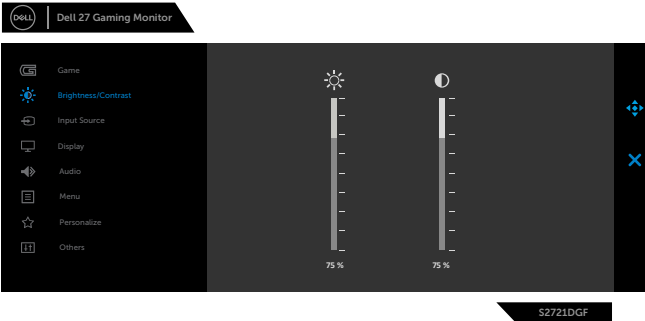


Icon	Menu and Submenus	Description
		<ul style="list-style-type: none"> <li>• <b>Game 1/Game 2/Game 3:</b> Allows you to customize the color settings for your gaming needs.</li> <li>• <b>ComfortView:</b> Decreases the level of blue light emitted from the screen to make viewing more comfortable for your eyes. <b>WARNING: The possible long-term effects of blue light emission from the monitor may cause personal injury such as digital eye strain, eye fatigue and damage to the eyes. Using monitor for extended periods of time may also cause pain in parts of body such as neck, arm, back and shoulder. For more information, see <a href="#">Ergonomics</a>.</b></li> <li>• <b>Warm:</b> Presents colors at lower color temperatures. The screen appears warmer with a red/yellow tint.</li> <li>• <b>Cool:</b> Presents colors at higher color temperatures. The screen appears cooler with a blue tint.</li> <li>• <b>Custom Color:</b> Allows you to manually adjust the color settings. Move the joystick to adjust the <b>Gain, Offset, Hue,</b> and <b>Saturation</b> values and create your own preset color mode.</li> </ul>
	<b>Game Enhance Mode</b>	<p>Adjusts Game Enhance Mode to Off, Timer, Frame Rate or Display Alignment.</p> <ul style="list-style-type: none"> <li>• <b>Off:</b> Select to disable the functions under <b>Game Enhance Mode</b>.</li> <li>• <b>Timer:</b> Allows you to disable or enable the timer at the upper left corner of the display. The timer shows the time elapsed since the game starts. Select an option from the time-interval list to keep you aware of the remaining time.</li> <li>• <b>Frame Rate:</b> Selecting On allows you to display the current frames per second when playing games. The higher the rate, the smoother the motion appears.</li> <li>• <b>Display Alignment:</b> Activating the function may help ensure the perfect alignment of the video contents from multiple displays.</li> </ul>
	<b>AMD FreeSync Premium Pro</b>	<p>Allows you to set the AMD FreeSync Premium Pro On or Off.</p>



Icon	Menu and Submenus	Description
	<b>Response Time</b>	Allows you to set the <b>Response Time</b> to <b>Fast</b> , <b>Super Fast</b> , or <b>Extreme</b> .
	<b>Dark Stabilizer</b>	The feature improves the visibility in the dark gaming scenarios. The higher the value (between 0 to 3), the better visibility in dark area of the display image.
	<b>Hue</b>	<p>This feature can shift the color of the video image to green or purple. This is used to adjust the desired flesh-tone color.</p> <p>Use the joystick to adjust the hue from 0 to 100.</p> <p>Move the joystick up to increase the green shade of the video image.</p> <p>Move the joystick down to increase the purple shade of the video image.</p> <p><b>NOTE:</b> The <b>Hue</b> adjustment is available only when you select <b>FPS</b>, <b>MOBA/RTS</b>, <b>SPORTS</b>, or <b>RPG</b> preset mode.</p>
	<b>Saturation</b>	<p>This feature can adjust the color saturation of the video image.</p> <p>Use the joystick to adjust the saturation from 0 to 100.</p> <p>Move the joystick up to increase the colorful appearance of the video image.</p> <p>Move the joystick down to increase the monochrome appearance of the video image.</p> <p><b>NOTE:</b> The Saturation adjustment is available only when you select <b>FPS</b>, <b>MOBA/RTS</b>, <b>SPORTS</b>, or <b>RPG</b> preset mode.</p>
	<b>Reset Game</b>	Resets all settings under the <b>Game</b> menu to the factory defaults.



Icon	Menu and Submenus	Description
	<b>Brightness/Contrast</b>	Use this menu to activate Brightness/Contrast adjustment.
		

### Brightness


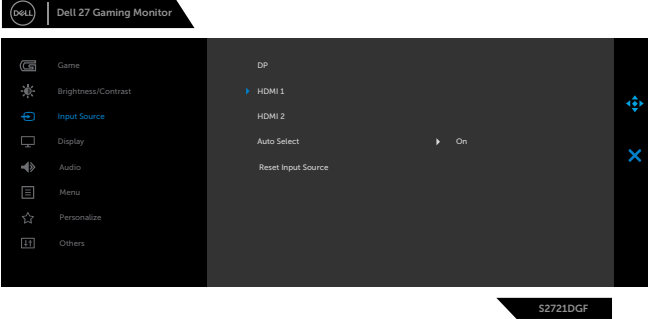
**Brightness** adjusts the luminance of the backlight (minimum 0; maximum 100).

Move the joystick up to increase brightness.  
 Move the joystick down to decrease brightness.


### Contrast


Adjust the **Brightness** first, and then adjust **Contrast** only if further adjustment is necessary.  
 Move the joystick up to increase contrast and Move the joystick down to decrease contrast (between 0 and 100).  
 The **Contrast** function adjusts the degree of difference between darkness and lightness on the monitor screen.



Icon	Menu and Submenus	Description
	<b>Input Source</b>	Use the <b>Input Source</b> menu to select between different video inputs that are connected to your monitor.
		
<b>DP</b>	Select <b>DP</b> input when you are using the <b>DP (DisplayPort)</b> connector. Press the joystick button to confirm the selection.	
<b>HDMI 1</b>	Select the <b>HDMI 1</b> or <b>HDMI 2</b> input when you are using the HDMI connector. Press the joystick button to confirm the selection.	
<b>HDMI 2</b>		
<b>Auto Select</b>	Turn on the function to allow the monitor to automatically scan for available input sources. Press the joystick button to confirm the selection.	
<b>Reset Input Source</b>	Resets all settings under the <b>Input Source</b> menu to the factory defaults.	




Icon	Menu and Submenus	Description
	Display	Use the Display menu to adjust image.

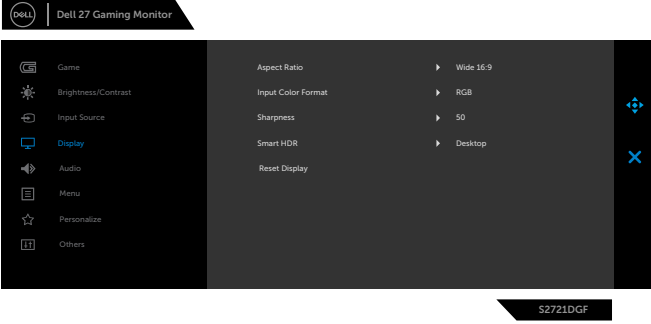

**Aspect Ratio** Adjust the image ratio to **Wide 16:9, Auto Resize, 4:3**.

**Input Color Format** Allows you to set the video input mode to:

- ♦ **RGB:** Select this option if your monitor is connected to a computer (or media player) using the DP or HDMI cable.
- ♦ **YPbPr:** Select this option if your media player supports only YPbPr output.

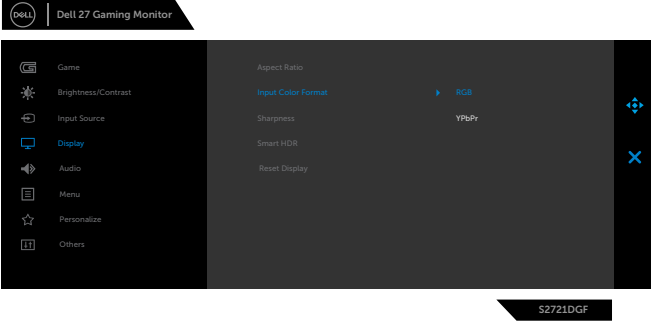
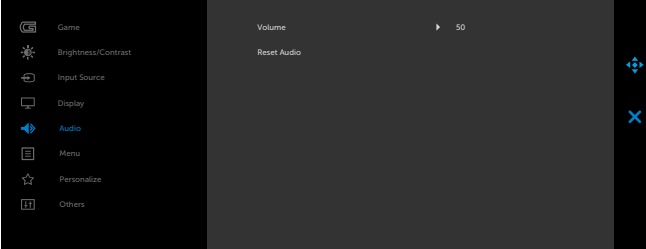


**Sharpness** Makes the image look sharper or softer. Move the joystick up and down to adjust the sharpness from '0' to '100'.


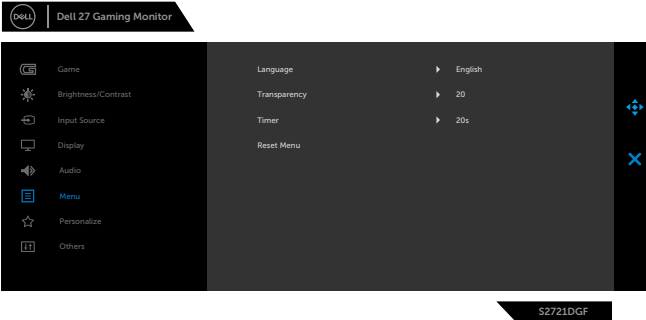


Icon	Menu and Submenus	Description
	<b>Smart HDR</b>	<p>Move the joystick to switch the Smart HDR feature between <b>Desktop</b>, <b>Movie HDR</b>, <b>Game HDR</b>, <b>DisplayHDR</b>, and <b>Off</b>.</p> <p>Smart HDR (High Dynamic Range) automatically enhances the display output by adjusting the settings optimally to resemble life-like visuals.</p> <ul style="list-style-type: none"> <li>• <b>Desktop:</b> This is the default mode. This mode is more suitable for general usage of the monitor with a desktop computer.</li> <li>• <b>Movie HDR:</b> Use this mode during playback of HDR video content to expand the contrast ratio, brightness, and color palette. It matches the video quality with real life visuals.</li> <li>• <b>Game HDR:</b> Use this mode when playing games that support HDR to expand the contrast ratio, brightness, and color palette. It makes gaming experience more realistic as intended by game developers.</li> <li>• <b>DisplayHDR:</b> Best used with content that complies with DisplayHDR standards.</li> <li>• <b>Off:</b> Disables Smart HDR function.</li> </ul> <p><b>NOTE:</b> The possible peak luminance during HDR mode is 400-nits (typical). The actual value and duration during HDR playback might vary accordingly to the video content.</p>
	<b>Reset Display</b>	Resets all settings under the <b>Display</b> menu to the factory defaults.




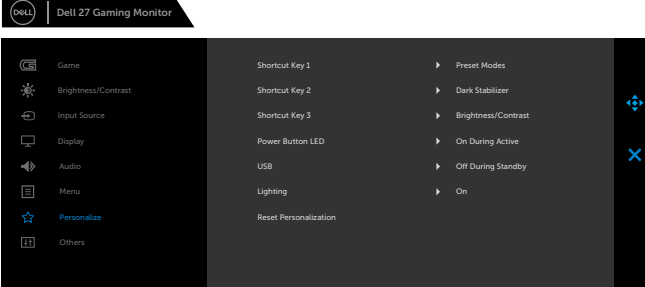
Icon	Menu and Submenus	Description
	<b>Audio</b>	
	<b>Volume</b>	<p>Allows you to set the volume level of headphone output. Use the joystick to adjust the volume level from 0 to 100.</p>
	<b>Reset Audio</b>	<p>Resets all settings under the <b>Audio</b> menu to the factory defaults.</p>



Icon	Menu and Submenus	Description
	<b>Menu</b>	<p>Select this option to adjust the settings of the OSD, such as the languages of the OSD, the amount of time the menu remains on screen, and so on.</p> 
	<b>Language</b>	<p>Set the OSD display to one of eight languages. (English, Spanish, French, German, Brazilian Portuguese, Russian, Simplified Chinese, or Japanese).</p>
	<b>Transparency</b>	<p>Select this option to change the menu transparency by moving the joystick up or down (min. 0/max. 100).</p>
	<b>Timer</b>	<p><b>OSD Hold Time:</b> Sets the length of time the OSD remains active after you press a button. Move the joystick to adjust the slider in 1-second increments, from 5 to 60 seconds.</p>
	<b>Reset Menu</b>	<p>Resets all settings under the <b>Reset</b> menu to the factory defaults.</p>





Icon	Menu and Submenus	Description
	<b>Personalize</b>	
<b>Shortcut key 1</b>	Select from <b>Preset Modes, Game Enhance Mode, AMD FreeSync Premium Pro, Dark Stabilizer,</b>	
<b>Shortcut key 2</b>	<b>Brightness/Contrast, Input Source, Aspect Ratio,</b>	
<b>Shortcut key 3</b>	<b>Smart HDR, Volume</b> set as shortcut key.	
<b>Power Button LED</b>	Allows you to set the state of the power light to save energy.	
<b>USB</b>	Allows you to set the USB On During Standby or Off During Standby to save energy.	
<b>Lighting</b>	Allows you to turn on or turn off lights on the rear of the monitor.	
<b>Reset Personalization</b>	Resets all settings under the <b>Personalize</b> menu to the factory preset values.	




Icon	Menu and Submenus	Description
------	-------------------	-------------



### Others

Select this option to adjust the OSD settings such as the **DDC/CI**, **LCD** conditioning, and so on.

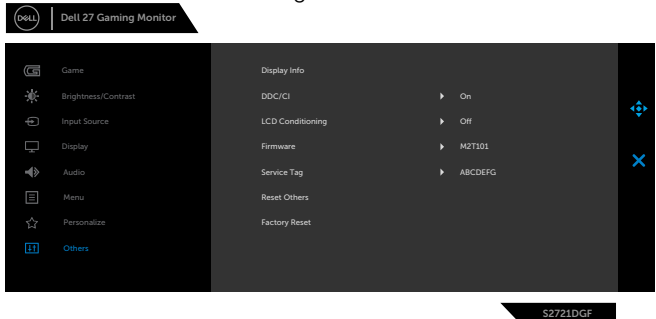



### Display Info

Displays the monitor's current settings.

### DDC/CI

**DDC/CI** (Display Data Channel/Command Interface) allows your monitor parameters (brightness, color balance, and etc.) to be adjustable via the software on your computer. You can disable this feature by selecting **Off**. Enable this feature for best user experience and optimum performance of your monitor.

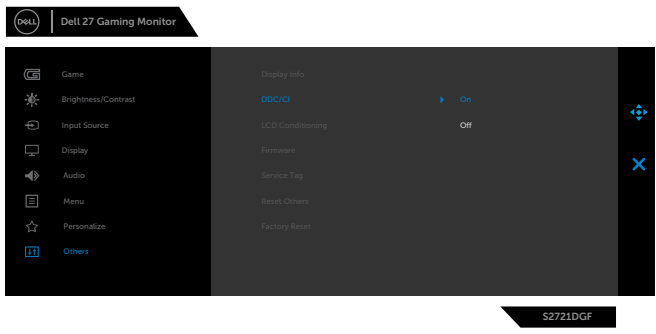


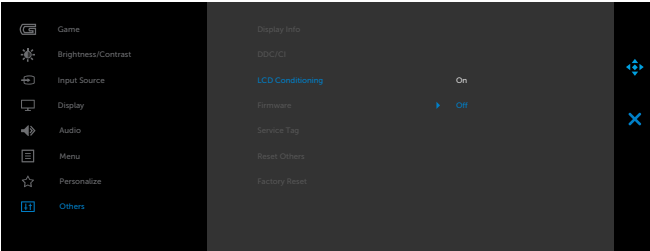Icon	Menu and Submenus	Description
	<b>LCD Conditioning</b>	Helps reduce minor cases of image retention. Depending on the degree of image retention, the program may take some time to run. You can enable this feature by selecting <b>On</b> .
		
	<b>Firmware</b>	Displays the firmware version of your monitor.
	<b>Service Tag</b>	Displays the Service Tag. The Service Tag is a unique alphanumeric identifier that allows Dell to identify the product specifications and access warranty information. <b>NOTE:</b> The Service Tag is also printed on a label located at the back of the cover.
	<b>Reset Others</b>	Resets all settings under the <b>Others</b> menu to the factory defaults.
	<b>Factory Reset</b>	Restores all preset values to the factory default settings.




## OSD warning messages

When the monitor does not support a particular resolution mode, you can see the following message:

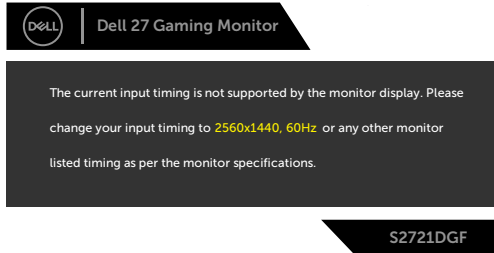


This means that the monitor cannot synchronize with the signal that it is receiving from the computer. See [Monitor Specifications](#) for the Horizontal and Vertical frequency ranges addressable by this monitor. Recommended mode is 2560 x 1440.

You can see the following message before the DDC/CI function is disabled:

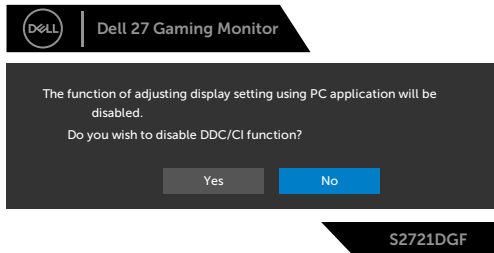

When the monitor enters the Power Save mode, the following message will appear:

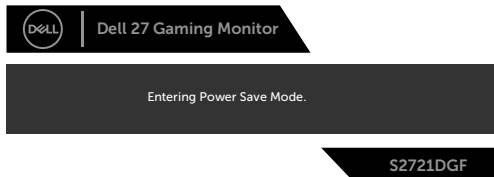


Activate the computer and wake up the monitor to gain access to the [OSD](#).




If you press any button other than the power button, the following messages will appear depending on the selected input:




If either DP, HDMI 1 and HDMI 2 input is selected and the corresponding cable is not connected, a floating dialog box as shown below appears.

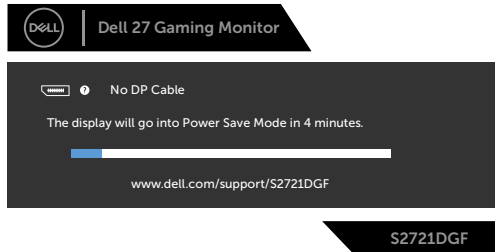


or

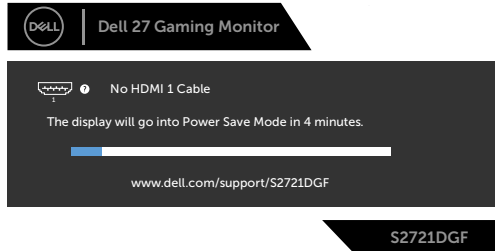

or

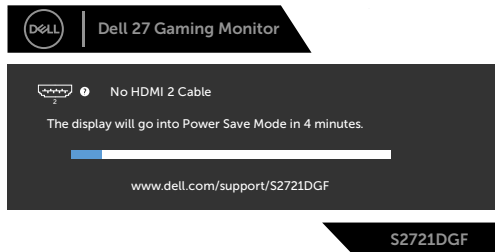


When you select OSD items of Factory Reset in Other feature, the following message will appear:

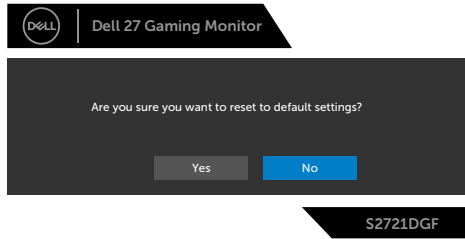

See [Troubleshooting](#) for more information.


### Locking the rear-panel control buttons

You can lock the rear-panel control buttons to prevent access to the OSD menu and/or power button.

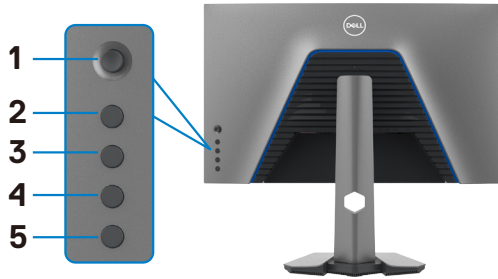

#### To lock the button(s):

1. Press and hold **Button 5** for four seconds, a menu appears on the screen.
2. Select one of the following options:
  - ♦ **Menu Buttons:** Choose this option to lock all OSD menu buttons except the Power button.
  - ♦ **Power Button:** Choose this option to lock only the Power button.
  - ♦ **Menu + Power Buttons:** Choose this option to lock all the buttons on the rear-panel control.

To unlock the button(s), press and hold **Button 5** for four seconds until a menu appears on the screen. Select the **Unlock icon**  to unlock the button(s).



## Setting the maximum resolution

To set the maximum resolution for the monitor:

In Windows 7, Windows 8 or Windows 8.1:

1. For Windows 8 or Windows 8.1 only, select the Desktop tile to switch to classic desktop. For Windows Vista and Windows 7, skip this step.
2. Right-click on the desktop and click **Screen Resolution**.
3. Click the Dropdown list of the **Screen Resolution** and select **2560 x 1440**.
4. Click **OK**.

In Windows 10:

1. Right-click on the desktop and click **Display Settings**.
2. Click **Advanced display settings**.
3. Click the dropdown list of **Resolution** and select **2560 x 1440**.
4. Click **Apply**.

If you do not see **2560 x 1440** as an option, you may need to update your graphics driver. Depending on your computer, complete one of the following procedures:

If you have a Dell desktop or portable computer:

- Go to <http://www.dell.com/support>, enter your service tag, and download the latest driver for your graphics card.

**If you are using a non-Dell computer (laptop or desktop):**

- Go to your computer manufacturer's support website and download the latest graphic drivers.
- Go to your graphics card manufacturer's website and download the latest graphic drivers.



# Troubleshooting


**⚠ WARNING:** Before you begin any of the procedures in this section, follow the [Safety Instructions](#).

## Self-test

Your monitor provides a self-test feature that allows you to check whether your monitor is functioning properly. If your monitor and computer are properly connected but the monitor screen remains dark, run the monitor self-test by performing the following steps:


1. Turn off both your computer and the monitor.
2. Unplug the video cable from the back of the computer. To ensure proper Self-Test operation, remove all digital and the analog cables from the back of computer.
3. Turn on the monitor.

The floating dialog box should appear on-screen (against a black background), if the monitor cannot sense a video signal and is working correctly. While in self-test mode, the power LED remains white. Also, depending upon the selected input, one of the dialogs shown below will continuously scroll through the screen.

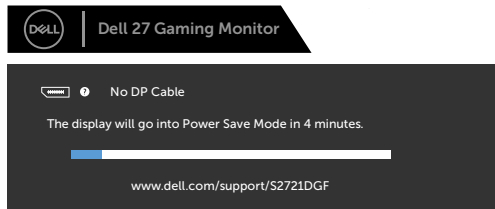

S2721DGF

or

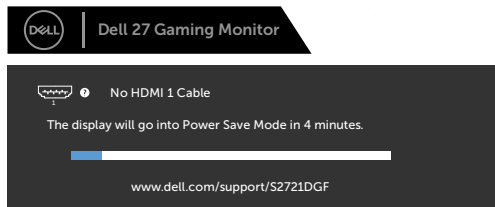


S2721DGF

or





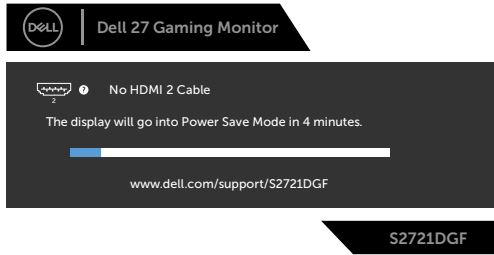


4. This box also appears during normal system operation if the video cable becomes disconnected or damaged.
5. Turn off your monitor and reconnect the video cable; then turn on both your computer and the monitor.

If your monitor screen remains blank after you use the previous procedure, check your video controller and computer, because your monitor is functioning properly.




# Built-in diagnostics

Your monitor has a built-in diagnostic tool that helps you determine if the screen abnormality you are experiencing is an inherent problem with your monitor, or with your computer and video card.

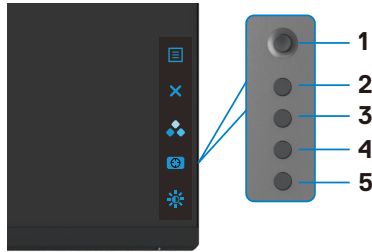

## To run the built-in diagnostics:

1. Ensure that the screen is clean (no dust particles on the surface of the screen).
2. Press and hold Button 5 for four seconds until a menu appears on the screen.
3. Using the joystick control, highlight the Diagnostics  option and press the joystick button to start the diagnostics. A gray screen is displayed.
4. Observe if the screen has any defects or abnormalities.
5. Toggle the joystick once again until a red screen is displayed.
6. Observe if the screen has any defects or abnormalities.
7. Repeat steps 5 and 6 until the screen displays green, blue, black, and white colors. Note any abnormalities or defects.

The test is complete when a text screen is displayed. To exit, toggle the joystick control again.

If you do not detect any screen abnormalities upon using the built-in diagnostic tool, the monitor is functioning properly. Check the video card and computer.



# Common Problems

The following table contains general information about common monitor problems you might encounter and the possible solutions:

Common Symptoms	What You Experience	Possible Solutions
No Video/ Power LED off	No picture	<ul style="list-style-type: none"><li>· Ensure that the video cable connecting the monitor and the computer is properly connected and secure.</li><li>· Verify that the power outlet is functioning properly using any other electrical equipment.</li><li>· Ensure that the power button is depressed fully.</li><li>· Ensure that the correct input source is selected in the <b>Input Source</b> menu.</li></ul>
No Video/ Power LED on	No picture or no brightness	<ul style="list-style-type: none"><li>· Increase brightness and contrast controls via OSD.</li><li>· Perform monitor self-test feature check.</li><li>· Check for bent or broken pins in the video cable connector.</li><li>· Run the built-in diagnostics.</li><li>· Ensure that the correct input source is selected in the <b>Input Source</b> menu.</li></ul>
Missing Pixels	LCD screen has spots	<ul style="list-style-type: none"><li>· Cycle power on-off.</li><li>· Pixel that is permanently off is a natural defect that can occur in LCD technology.</li><li>· For more information on Dell Monitor Quality and Pixel Policy, see Dell Support site at: <a href="http://www.dell.com/pixelguidelines">www.dell.com/pixelguidelines</a>.</li></ul>
Stuck-on Pixels	LCD screen has bright spots	<ul style="list-style-type: none"><li>· Cycle power On-Off.</li><li>· Pixel that is permanently off is a natural defect that can occur in LCD technology.</li><li>· For more information on Dell Monitor Quality and PixelPolicy, see Dell Support site at: <a href="http://www.dell.com/pixelguidelines">www.dell.com/pixelguidelines</a>.</li></ul>
Brightness Problems	Picture too dim or too bright	<ul style="list-style-type: none"><li>· Reset the monitor to factory settings.</li><li>· Adjust brightness and contrast controls via OSD.</li></ul>
Safety Related Issues	Visible signs of smoke or sparks	<ul style="list-style-type: none"><li>· Do not perform any troubleshooting steps.</li><li>· Contact Dell immediately.</li></ul>



Common Symptoms	What You Experience	Possible Solutions
Intermittent Problems	Monitor malfunctions on & off	<ul style="list-style-type: none"> <li>• Ensure that the video cable connecting the monitor to the computer is connected properly and is secure.</li> <li>• Reset the monitor to factory settings.</li> <li>• Perform monitor self-test feature check to determine if the intermittent problem occurs in self-test mode.</li> </ul>
HDR Problems	Cannot set GFX solution into HDR mode after switching into Desktop/ Movie HDR/ Game HDR/ DisplayHDR Presets	<ul style="list-style-type: none"> <li>• Ensure your computer or graphics solution meets the minimum requirement for HDR playback and install the latest software drivers for the graphics card.</li> <li>• Ensure that the HDMI 2.0 cable that comes with the package is used.</li> <li>• If the above steps fail, choose the resolution 2560 x 1440 from the Display Properties to force the proper HDR signaling.</li> </ul>
Missing Color	Picture missing color	<ul style="list-style-type: none"> <li>• Perform monitor self-test.</li> <li>• Ensure that the video cable connecting the monitor to the computer is connected properly and is secure.</li> <li>• Check for bent or broken pins in the video cable connector.</li> </ul>
Wrong Color	Picture color not good	<ul style="list-style-type: none"> <li>• Change the settings of the Preset Modes in the Color menu OSD depending on the application.</li> <li>• Adjust R/G/B value under Custom Color in Color menu OSD.</li> <li>• Change the Input Color Format to PC RGB or YPbPr in the Color menu OSD.</li> <li>• Run the built-in diagnostics.</li> </ul>
Image retention from a static image left on the monitor for a long period of time	Faint shadow from the static image displayed appears on the screen	<ul style="list-style-type: none"> <li>• Use the Power Management feature to turn off the monitor at all times when not in use (for more information, see <a href="#">Power Management Modes</a>).</li> <li>• Alternatively, use a dynamically changing screensaver.</li> </ul>



# Product specific problems

<b>Problem</b>	<b>What you experience</b>	<b>Possible solutions</b>
Screen image is too small	Image is centered on screen, but does not fill entire viewing area	<ul style="list-style-type: none"> <li>· Check the Aspect Ratio setting in the Display menu OSD.</li> <li>· Reset the monitor to factory settings.</li> </ul>
Cannot adjust the monitor with the buttons on the front panel	OSD does not appear on the screen	<ul style="list-style-type: none"> <li>· Turn off the monitor, unplug the monitor power cable, plug it back, and then turn on the monitor.</li> </ul>
No Input Signal when user controls are pressed	No picture, the LED light is white	<ul style="list-style-type: none"> <li>· Check the signal source. Ensure the computer is not in the power saving mode by moving the mouse or pressing any key on the keyboard.</li> <li>· Check whether the signal cable is plugged in properly. Connect the signal cable again, if necessary.</li> <li>· Reset the computer or video player.</li> </ul>
The picture does not fill the entire screen	The picture cannot fill the height or width of the screen	<ul style="list-style-type: none"> <li>· Due to different video formats (aspect ratio) of DVDs, the monitor may display in full screen.</li> <li>· Run the built-in diagnostics.</li> </ul>
No image when using DP connection to the PC	Black screen	<ul style="list-style-type: none"> <li>· Verify which DP standard (DP 1.1a or DP 1.4) is your Graphics Card certified to. Download and install the latest graphics card driver.</li> <li>· Some DP 1.1a graphics card cannot support DP 1.4 monitors. Go to OSD menu, under Input Source selection, press and hold DP select joystick key for 8 sec to change the monitor setting from DP 1.4 to DP 1.1a.</li> </ul>



## Universal Serial Bus (USB) specific problems

Specific Symptoms	What You Experience	Possible Solutions
USB interface is not working	USB peripherals are not working	<ul style="list-style-type: none"><li>· Check that your display is turned ON.</li><li>· Reconnect the upstream cable to your computer.</li><li>· Reconnect the USB peripherals (downstream connector).</li><li>· Turn off the monitor and turn it on again.</li><li>· Reboot the computer.</li><li>· Certain USB devices such as portable hard drives require higher power source; connect the drive to the computer directly.</li></ul>
SuperSpeed USB 3.0 interface is slow.	SuperSpeed USB 3.0 peripherals working slowly or not working at all	<ul style="list-style-type: none"><li>· Check that your computer is USB 3.0-capable.</li><li>· Some computers have USB 3.0, USB 2.0, and USB 1.1 ports. Ensure that the correct USB port is used.</li><li>· Reconnect the upstream cable to your computer.</li><li>· Reconnect the USB peripherals (downstream connector).</li><li>· Reboot the computer.</li></ul>
Wireless USB peripherals stop working when a USB 3.0 device is plugged in	Wireless USB peripherals responding slowly or only working as the distance between itself and its receiver decreases	<ul style="list-style-type: none"><li>· Increase the distance between the USB 3.0 peripherals and the wireless USB receiver.</li><li>· Position your wireless USB receiver as close as possible to the wireless USB peripherals.</li><li>· Use a USB-extender cable to position the wireless USB receiver as far away as possible from the USB 3.0 port.</li></ul>
USB is not working	No USB functionalities	Refer to input source and USB pairing table.



# Appendix

## FCC notices (U.S. only) and other regulatory information

For FCC notices and other regulatory information, see the regulatory compliance website located at [www.dell.com/regulatory\\_compliance](http://www.dell.com/regulatory_compliance).

## Contacting Dell

 **NOTE: If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.**

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area.

### To get online Monitor support content:

See [www.dell.com/support/monitors](http://www.dell.com/support/monitors).

### To contact Dell for sales, technical support, or customer service issues:

1. Go to [www.dell.com/support](http://www.dell.com/support).
2. Verify your country or region in the Choose A Country/Region drop-down menu at the bottom-right corner of the page.
3. Click Contact Us next to the country dropdown.
4. Select the appropriate service or support link based on your need.
5. Choose the method of contacting Dell that is convenient for you.



# Outline Dimension

## S2721DGF Outline Dimension

Unit :mm(inch)  
 Dimension :Nominal  
 Drawing : Not to scale

